

LANCOM Indoor Access Points

| AirLancer Antenna | L-151gn Connector: Reverse SMA-Jack | L-151E Connector: Reverse SMA-Jack | L-321agn Connector: Reverse SMA-Jack | L-322agn Connector: Reverse SMA-Jack | L-322E Connector: Reverse SMA-Jack | L-1302acn Connector: Reverse SMA-Jack | L-822acn Connector: Reverse SMA-Jack |
|--|--|--|--|--|--|--|--|
| ON-T360ag/ON-Q360ag Connector: N-Jack | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ |
| ON-T60ag/ON-Q60ag Connector: N-Jack | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ |
| ON-T90ag/ON-Q90ag Connector: N-Jack | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ |
| ON-360ag Connector: N-Jack | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ | With adaptor cable AirLancer AN-RPSMA-NJ |
| O-30 Connector: N-Jack | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug |
| O-D9a Connector: N-Jack | | | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug |
| O-9a Connector: N-Jack | | | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug |
| O-18a Connector: N-jack | | | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug | With antenna enclosed adaptor cable AirLancer RP-SMA Plug / N Plug |
| O-360-4G Connector: SMA Plug | | | | | | | |
| IN-T180ag Connector: Reverse-SMA-Plug | No adaptor required | No adaptor required | No adaptor required | No adaptor required | No adaptor required | No adaptor required | No adaptor required |
| I-60ag Connector: Reverse-SMA-Plug | No adaptor required | No adaptor required | No adaptor required | No adaptor required | No adaptor required | No adaptor required | No adaptor required |
| I-360-3G Connector: Reverse-SMA-Plug | | | | | | | |
| I-360-4G Connector: Reverse-SMA-Plug | | | | | | | |

matching adaptor / cable must be purchased

matching adaptor / cable enclosed with access point or antenna

no adaptor required